

HARBOUR

60cm 80L Electric Oven

QUICK START GUIDE



80L Gross
Capacity



Premium
Finishes



Touch Control
Timer



9 Oven
Functions


IN HOME
WARRANTY
3
YEAR

TIPS FOR USING & OPERATING YOUR OVEN (HBROB609)
SUPPORT: 1300 11 4357 | WWW.HARBOUR-APPLIANCES.COM.AU

Tips & Tricks for using your new Oven





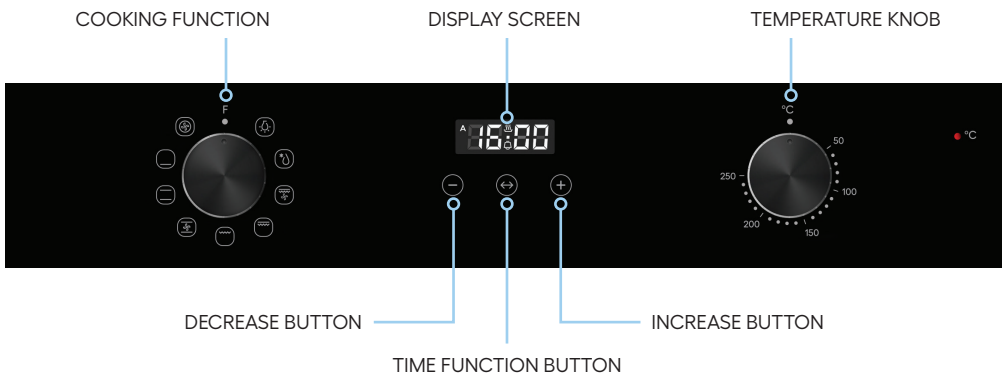




QUICK START GUIDE: HBROB609

Control Panel



 
Oven Functions

Your Harbour 60cm 80L Electric Oven has 9 preset cooking functions. These are:

-  Oven lamp
-  Defrost
-  Lower element
-  Conventional cooking
-  Convection with fan
-  Grill
-  Max grill
-  Max grill with fan
-  Convection

For more information on these functions refer to Page 8 of your instruction manual.

Selecting the oven operation mode

When the oven is in standby mode (not in use), press the “↔” button for 5 seconds. The oven will enter Manual mode and the symbol “” will display on the screen continuously.

1. Turn the Cooking Function and Temperature knobs to desired settings.
2. From Manual mode, press the “↔” button to cycle through the other oven operation modes.

The sequence of the operation modes is Manual mode, Minute minder, Duration (Dur) and End.

For more information on each of these operation modes and other operating instructions, refer to Pages 11–13 of your instruction manual.