

H A R B O U R

118L Outdoor Beverage Chiller

INSTRUCTION MANUAL



IM VERSION: V1.4 | MODEL: HBROBF118B | PRODUCT CODE: 707825 | ISSUE DATE: 12/2021
SUPPORT: 1300 11 4357 | WWW.HARBOUR-APPLIANCES.COM.AU

Welcome

Congratulations on purchasing your new Outdoor Beverage Chiller.

All products brought to you by Harbour are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 3 Year In Home Warranty. We hope you will enjoy using your purchase for many years to come.

Contents

- 2** Welcome
- 4** Warranty Details
- 5** General Safety Instructions
- 8** Product Overview
- 10** Getting Started
- 11** Installation
- 14** Operation Instructions
- 16** Other Useful Information
- 19** FAQs and Troubleshooting
- 20** Specifications
- 22** Repair and Refurbished Goods or Parts Notice
- 23** Warranty Returns



H A R B O U R

Outdoor Beverage Chiller 118L Capacity

Warranty Details

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/ TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 36 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



General Safety Instructions

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings.

Keep the manual in a safe place for future reference, along with the completed warranty card and purchase receipt. If you sell or transfer ownership of this product, pass on these instructions to the new owner.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

IMPORTANT: Pay particular attention to messages that contain the words **DANGER, WARNING** or **CAUTION**. These words are used to alert you to a potential hazard that can seriously injure you and others. The instructions will tell you how to reduce the chance of injury and let you know what can happen if the instructions are not followed.



This symbol alerts you to take care as this appliance contains a flammable refrigerant (isobutane) and insulation blowing gas (cyclopentane). Do not expose it to high heat, sparks and open flames.

The refrigerant isobutane (R600a) is contained within the refrigerant circuit of the appliance, a gas with a high level of environmental compatibility, which is nevertheless flammable. During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit become damaged.

WARNING: Do not damage the refrigerant circuit! Never use an appliance with a damaged refrigerant circuit! If the refrigerant circuit becomes damaged, avoid proximity to open fires and all types of heat and ignition sources. Thoroughly ventilate the room in which the appliance is located.

WARNING: Leaking Gas: In the case of leaking gas, turn off the valve of the leaking gas, open the doors and windows in case of leakage of gas and other flammable gases. Do not unplug the chiller and other electrical appliances considering that spark may cause a fire.

DANGER: It is hazardous for anyone other than an authorised service person to service this appliance. In Queensland, the authorised service person **MUST** hold a Gas Work Authorisation for hydrocarbon refrigerants to carry out servicing or repairs which involve the removal of covers.

The room for installing the appliance must be at least 1m³ per 8g of refrigerant. The amount and type of refrigerant in the appliance can be found in the Specifications section of this user manual and on the rating plate, found on the appliance.

Note: If using the beverage chiller outside in an alfresco area ensure that it is directly connected to an outdoor power point and please ensure it is not left in the weather or in direct sunlight. All electrical connections are to be made in a dry area and outdoor power points must be weatherproof and installed by a qualified electrician. The appliance must not be exposed to rain.

GENERAL SAFETY INSTRUCTIONS CONT.

USAGE CONDITIONS AND RESTRICTIONS

- **Domestic use only:** This appliance is intended for indoor and outdoor household use only. It is not intended for commercial, industrial or outdoor use. It is not intended for use in a recreational vehicle.
- **Purpose:** Do not use this appliance for anything other than its intended purpose. Other uses are not recommended and may cause fire, electric shock or personal injury.
- **Attachments:** The use of attachments is not recommended by the appliance manufacturer and distributor as they may be hazardous.
- **Improper use:** Damage due to improper use, or repairs made by unqualified personnel will void your warranty. We assume no liability for any eventual damages caused by misuse of the product or noncompliance with these instructions.
- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **Usage restriction:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- **Children:** Supervise young children to ensure they do not play with the appliance. Never allow children to operate, play with or crawl inside the appliance.
- **WARNING:** Do not use electrical appliances inside the appliance, unless they are of the type recommended by the manufacturer.
- **Explosive or flammable substances:** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. Do not store or use petrol or any other flammable vapours and liquids in the vicinity of this or any other appliance. Do not use such substances for cleaning the appliance. The fumes can create a fire hazard or an explosion.
- **Damage:** Do not use the appliance if the power cord, plug or the appliance itself is damaged. If the cord is damaged, contact the after sales support line and have the cord replaced by qualified personnel in order to avoid a hazard.
- **WARNING:** Do not damage the refrigerant circuit.
- **Do not modify:** Do not attempt to alter or modify this appliance in any way.
- **Repair:** Do not attempt to repair or replace any part of this appliance unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician. Contact the after sales support line for advice.
- **WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- **Usage:** The gaps between chiller door and chiller body are small, because not to jam your fingers in these areas. Please be gentle when close or open the chiller door to avoid falling objects.
- **Care:** Do not use chiller body, chiller door, etc. as pedal or support
- **WARNING:** Keep ventilation openings, in the beverage chiller enclosure or in-built structure, clear of obstruction.

GENERAL SAFETY INSTRUCTIONS CONT.

ELECTRICAL SAFETY

- **Voltage:** Before connecting and turning on the appliance, ensure the electrical voltage and circuit frequency correspond to that indicated on the appliance rating label.
- **Earthing:** This appliance should be properly earthed for your safety. The power cord of this appliance is equipped with a three-prong plug for use in standard wall outlets to minimise the possibility of electrical shock. Do not modify the cord and/or plug provided with the appliance. Improper use of the earthed plug can result in the risk of electric shock.
- **Connection:** This appliance requires a standard 220-240 V AC 50Hz electrical outlet. Do not overload the electrical circuit.
- **Power cord:** Do not kink or damage the power cord; do not leave it exposed or dangling. Secure it at the back of the appliance so no one steps on or places anything on the cord or against it. Keep the cord out of reach of children. When moving the appliance, make sure not to damage the power cord. When removing the power cord, firmly grasp the plug and pull out it from the socket directly.
- **Auxiliary Items:** Do not use an inverter, adaptor or extension cord with this appliance. If the cord is too short, have a qualified electrician install an outlet near the appliance. Use of an extension cord and an inverter can negatively affect the performance of the unit.
- **Protect from moisture:** To protect against the risk of electric shock, do not immerse the unit, cord or plug in water or spray it with any other liquid. Do not connect or disconnect the electric plug when your hands are wet. Turn the power switch off before removing the plug from the socket.
- **WARNING: Disconnect!** To reduce the risk of fire, electric shock or personal injury, always unplug the appliance from the socket when not in use, when moving and before cleaning or servicing. Never unplug the unit by pulling the power cord. Always grip the plug firmly and pull straight out from the power point.
- **Electrical work:** Any electrical work required for the installation of this appliance should be carried out by a qualified electrician.

Product Overview

118L OUTDOOR BEVERAGE CHILLER



Key:

1. Electronic Control Panel
2. Handle
3. Stainless steel door frame
4. Shelves (x2)
5. Base with ventilation
6. Door lock (on front of door)
7. Adjustable feet (x4)

 
Not shown but also included:

- 8 × Shelf supports (x8 + 1 spare),
see page 13 for more details
- 2 × Keys for door lock,
see page 17 for more details
- 1 × Instruction manual
- 1 × Quick start guide
- 1 × Warranty certificate

Note: The images in this user manual are for reference only. Your appliance may appear differently.

PRODUCT OVERVIEW CONT.

CONTROL PANEL LAYOUT

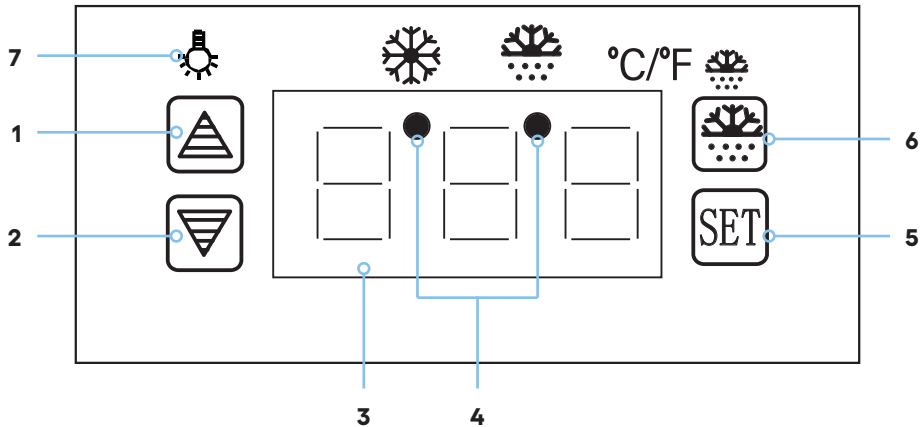

Key:

- 1. Temperature Control: Up Button**
- 2. Temperature Control: Down Button**
Press the Up or Down buttons to increase or decrease the temperature inside the Beverage Chiller cabinet in 1° intervals. See more on page 14.
- 3. LED Display**
- 4. Indicator Lights**
Indicator on the left relates to the Cooling Symbol: ❄️
Indicator on the right relates to the Defrost Symbol: ❄️🔴
See pages 14–15 for more information on these.
- 5. Set Temperature Button**
Press this button to set the desired temperature.
See more on page 14.
- 6. Defrost Button**
Press this button to manually activate the defrost cycle.
See more on page 15.
- 7. Light Function**
Press the UP Button once to turn the light on or off.

Getting Started

UNPACKING

- **Packaging materials:** This appliance has been packaged to protect it against transportation damage. Remove all packaging materials from around and inside the appliance including the bottom cushions, foam pads, tapes inside the chiller, tear off the protective film on the door and the chiller body. Keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event the carton is to be disposed of, please recycle all packaging materials where possible.
 - **Check:** to see if all items are present.
 - **Inspect:** the equipment and accessories for transport damage. In case of complaints, the supplier is to be informed immediately.
 - **Suffocation:** Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
 - **Power cord:** Unwind the power cord to its full length and inspect it for damage. Do not use the appliance if it or its cord have been damaged or are not working properly. In case of damage, contact our after sales support line for advice on examination, repair or return of the damaged product.
 - **Read the manual:** Read this manual to familiarise yourself with the appliance. Pay particular attention to the safety instructions on the previous pages.
 - **Clean:** To remove any dust from transit and storage, clean the interior and exterior surfaces of the appliance with lukewarm water and a soft cloth. Dry thoroughly.
- Important:** do not use harsh or abrasive detergents or powders as these will damage the finish.

Installation

- **Two person installation:** Use two or more able-bodied people to move and install the beverage chiller. Failure to do so can result in back or other injury.
- **Floor surface:** This beverage chiller must be properly positioned on a dry, sturdy, level surface that is strong enough to support it when it is fully loaded.
- **Location:** We recommend that this beverage chiller is installed in a sheltered location with the required power safely accessible. For example: an alfresco area, under a protected veranda or in a garage. Please ensure it is not left in the weather or in direct sunlight and it is always protected from rain, water or excessive moisture.
- **Tropical rating:** This rating allows the beverage chiller to be operating effectively in temperatures up to 43° C.

Positioning: This appliance must be properly positioned on a dry, sturdy, level surface that is strong enough to support it when it is fully loaded. Rotate left or right to adjust the adjustable feet if unstable. If it is to be placed on carpet, support it with a wooden board underneath. This appliance is designed to be freestanding or built-in. See page 12 for more details on this.

Clearances: Ensure that air can circulate freely around the back of the cabinet, which is necessary to cool the compressor and condenser. Allow at least 5cm clear space at the back and sides of the unit and the front of the unit is completely unobstructed. Failure to do so will increase compressor's power and further increase power consumption. It is also necessary to maintain distance for doors to open at least 90°. Ensure that the ventilation openings are never blocked or covered. Never cover shelves with aluminium foil or any other material, which may prevent air circulation.

Wall Units Above: Ideally, the appliance should not be positioned below overhanging wall units. However, if the appliance must be positioned below an overhanging wall unit, make sure to allow sufficient room so you can comfortably open the lid and access the contents.

DO NOT install/use the appliance in the following locations/situations:

- In a recreational vehicle, or for use with an inverter.
- In direct sunlight, near heat sources, next to an open flame, cooking or heating appliance, or near any other source of high heat.
- Direct sunlight may affect the acrylic coating and heat sources may increase the unit's power consumption. For best energy efficiency install the appliance in the coolest area of the room.
- In an area with extreme cold ambient temperatures.
- During camping.
- In an area with excessive moisture and high humidity. Make sure it is protected from elements such as wind, rain, water spray or drips.
- In an area where petrol or other explosive and/or flammable liquids or fumes are used or stored. The fumes can create a fire hazard or explosion.

ENERGY SAVING TIPS

The appliance should be placed in the coolest area of the room, away from heat producing appliances or heating ducts. A suitable insulation board shall be applied if necessary.

Please avoid placement in direct sunlight.

Try to shorten opening time of chiller's door.

INSTALLATION CONT.

- **Settling:** Before connecting the beverage chiller to the power source, let it stand upright for approximately 8 hours. This will allow any refrigerant gases that may have been disturbed during the transportation process to settle and reduce the possibility of a malfunction in the cooling system from handling during transportation.
- **Electrical connection:** You should check whether there is an electrical socket available, which will be accessible after your appliance is installed. Plug the beverage chiller into a dedicated, properly installed wall outlet. Do not under any circumstances cut or remove the third (earth) prong from the power cord. Any questions concerning power and/or earthing should be directed toward a licensed electrician or our after sales support centre.
- **After plugging the beverage chiller in, turn the unit on and allow it to cool down for 3–4 hours before placing beverages in the appliance.**

POSITIONING AND AMBIENT TEMPERATURES

- This beverage chiller is rated to tropical ambient temperatures. Your beverage chiller may not function correctly if the ambient temperature exceeds 43° C.
- Your appliance should not be located in direct sunlight or exposed to continuous heat or extremes of temperature (e.g. next to a radiator or boiler). If this is not feasible, then you should install an insulation plate between the appliance and the adjacent heat source.
- Place the beverage chiller flatly and firmly on a solid base.
- Anything positioned above the beverage chiller must be at least 5 cm away to allow sufficient cooling of the condenser. You must allow a 5 cm gap to the rear and either side of the appliance.
- Be sure to leave enough space for the opening of the door, to avoid damage to the appliance or personal injury.


Built-in or Freestanding Installation: Your beverage chiller can be used as a freestanding or a built in unit. The clearances shown in the drawing below (Fig. 1) should be followed for both types of installation.

- In particular, the depth dimension must be observed.

IMPORTANT: The vent at the base of the appliance is for ventilation. Nothing should be placed in front of this vent; otherwise your beverage chiller may not operate properly.

- A decorative plinth can be fitted to the front of the base vent as long as the cut out of 512mm wide × 40mm high is made in the plinth.

 Fig. 1

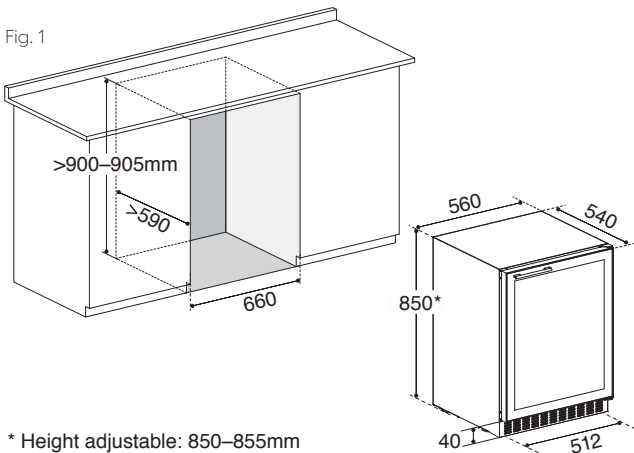


INSTALLATION CONT.

POSITIONING THE SHELVES

Position the shelf supports inside the racks on the sides (as illustrated in Fig. 2) at your required level. You can then place the shelves firmly on the supports and begin to load your contents.

Note: The maximum load for a shelf is 40kg.

 Fig. 2

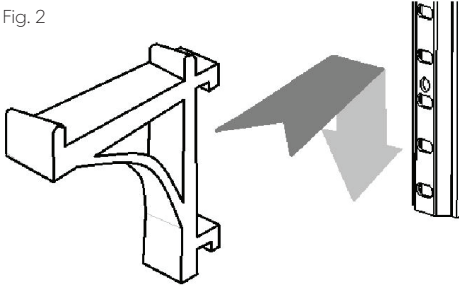

Operation Instructions

UNPACKING

- **First use:** After delivery, wait for eight hours before connecting the appliance to your mains supply. This will allow any refrigerant gases that may have been disturbed during the transportation process to settle.
- **First cooling down:** When you first switch on the beverage chiller, the compressor will run continuously until the beverage chiller reaches the set temperature. During this period of time, try not to open the door frequently or place bottles inside the appliance. After about 3–4 hours, you can start loading the beverage chiller.
- **Odour:** You may notice an odour when you first switch on the beverage chiller. This is due to the parts being new and is no cause for concern. The odour will subside as the beverage chiller starts to cool.

IMPORTANT:

- When you use the beverage chiller for the first time or restart it after it has been turned off for a long time, there could be a few degrees variance between the temperature you select and the one indicated on the LED display. This is normal and it is due to the length of activation time. Once the beverage chiller has been running for a few hours, everything will return back to normal.
- When loading several bottles or cans at once, it will take longer for the appliance to cool the individual bottles than when adding a bottle at a time.
- If the unit is switched off or unplugged, you must allow at least 5 minutes before restarting the beverage chiller or reconnecting it to your mains supply.

TURNING THE APPLIANCE ON AND OFF

- When the beverage chiller is connected to the power outlet it will turn on automatically.

NORMAL OPERATION

- During normal operation the controller display will show the desired temperature that the beverage chiller is currently set to.
- The small indicator light on the left (under the ❄️ symbol) will illuminate to confirm the beverage chiller is in its normal cooling mode, and compressor is running.

TO SET THE DESIRED TEMPERATURE

- Press the “SET” (SET) button once. A ‘beep’ will sound, and the display will start to flash.
- Use the “Up” or “Down” (▲ or ▼) buttons to set to the desired temperature. Fig. 3
- Press “SET” again to complete the operation. Alternatively, do not press anything for 5–10 seconds and the new desired temperature setting will be saved.



AUTOMATIC DEFROST





- **Note:** The beverage chiller is built to automatically defrost and prevent any ice forming on the evaporator. The ‘Defrost’ cycle will automatically run for 20 minutes once every 8 hours.
- When in a ‘Defrost’ cycle, the indicator light will illuminate under the ❄️ symbol.

MANUAL DEFROST

- Press the ‘Defrost’ (❄️) button and hold it down—a ‘beep’ will sound as soon as it is pressed.
- Hold button down for 6 seconds, until a second ‘beep’ can be heard.
- The indicator light will now illuminate under the ❄️ symbol and the chiller is now in ‘defrost’ cycle.
- ‘Defrost’ will run for 20 minutes, and then automatically revert to normal operation.

OPERATION INSTRUCTIONS CONT.

MANUALLY CHANGING BACK TO NORMAL OPERATING MODE FROM THE 'DEFROST' MODE

- Press the 'Defrost' () and a 'beep' will sound.
- Hold the button down for 6 seconds, until a second 'beep' is heard.
- Both indicator lights under the  symbol and under the  symbol will now flash while the beverage chiller is gearing up to switch back to normal operation.
- After 5–20 minutes, only the indicator light will illuminate under the  symbol to confirm the beverage chiller is back in its normal cooling mode.

IMPORTANT:

- The beverage chiller will go through its normal automatic defrosting cycle and a manual defrosting operation is only required in most extreme cases. It is better to avoid if not necessary.
- While in the 'Defrost' mode, the beverage chiller cooling power is reduced. The automatic cycles ensure the defrosting is done in the most efficient manner, and only when required. It is not recommended to leave the beverage chiller in the manually set defrost mode for prolonged periods of time.

Loading the Beverage Chiller

- Always check that you can close the door without it hitting a bottle or can, before shutting it.
- When loading several bottles or cans at once, it will take longer for the appliance to cool the individual bottles or cans.

IMPORTANT:

- Do not overload the cabinet, and only store drinks in sealed bottles or cans.
- Storing larger or different shaped bottles may affect its storage capacity. If storing larger bottles, make sure that they do not prevent the door from shutting properly. Before shutting the door, always check that you can close it without bottles falling down inside the cabinet.

Note: The controller allows you to choose a desired operating temperature of between 0°C and 10°C. We do not recommend to operate the beverage chiller on settings of below 4°C for prolonged periods, as doing so could cause contents of the chiller to freeze. This could result in unnecessary strain on the cooling systems, and undue high energy consumption.

Other Useful Information

CLEANING AND MAINTENANCE

WARNING: Before cleaning the appliance, make sure it is switched off and disconnected from the power supply. Failure to do so can result in electric shock or injury.

- Before cleaning: take out any drinks as well as the shelves.
- Wash the inside surfaces with a solution of lukewarm water (1L) and baking soda (2 tbsp). Use a soft, clean cloth to wipe down the surfaces, then rinse with clean water and dry with a dry cloth. Do not use soap or detergent for cleaning the cabinet. DO NOT allow the control panel, cables or plug to get wet.

NOTE: Wring excess water out of the cloth when cleaning around the controls or electrical parts.

- Make sure to keep the door gasket (seal) clean to keep the unit running efficiently.
- Wash the shelves and the outside of the cabinet with a mild detergent solution. Wipe dry with a clean soft cloth.
- Dust or anything else blocking the vent may hinder the cooling efficiency of the appliance. Always keep the vent clean; vacuum it if necessary.

WARNING:

Never clean the unit with an abrasive, acid, oil or solvent based cleaning agent. Never use flammable fluids or sprays for cleaning as the fumes from these substances can create a fire hazard or explosion.

WHEN YOU ARE ON HOLIDAYS

- Leave the beverage chiller operating during holidays of less than three weeks. If you are not going to use the beverage chiller for longer periods, remove all items and unplug the power cord. Clean and dry the interior thoroughly. To prevent odours and mould growth, leave the door open slightly, blocking it open if necessary.
- To move the beverage chiller, take all items out of the appliance, securely tape down the shelves or remove them and tape the door shut. Turn the levelling leg up to the base to avoid damage.
- Protect the outside of the beverage chiller with a blanket or similar soft material and make sure the beverage chiller stays secure in the upright position during transportation.


ADJUSTING THE HEIGHT AND LEVELLING

- The appliance is equipped with adjustable feet, so that the height may be adjusted to level the cabinet on uneven floor surfaces.
- We recommend that two people carry out this procedure.
- The height must be adjusted prior to building the appliance into the housing unit and it should be set at such a height that the top panel of the appliance fits 5cm below the kitchen worktop.
- Tilt the appliance approximately 60° to allow access to the adjustable feet.
- Take care to ensure the cabinet is supported at all times.
- Twist the foot into a suitable position to level the cabinet. (Fig. 4)
- Repeat these steps for the other adjustable feet.

IMPORTANT: If the appliance is not level, then the door and door seal may be affected.

IMPORTANT: Do not move the appliance when the feet are adjusted high.

 Fig. 4

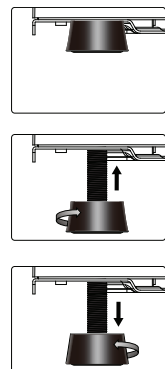

OTHER USEFUL INFORMATION CONT.

POWER FAILURE

Most power failures are corrected within a few hours and should not affect the temperature of your beverage chiller if you minimise the number of times the door is opened. If the power is going to be off for a longer period of time, take proper steps to protect the contents.

SERVICE AND REPAIR

Do not attempt to alter or modify this beverage chiller in any way. Do not attempt to repair or replace any part of the beverage chiller unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician. Contact the after sales support line for advice.

SPARE PARTS

Our after sales support centre stocks a selection of spare parts for the HBROBF118B – 118L Outdoor Beverage Chiller. To purchase a part outside of warranty, call the centre on 1300 11 4357 or email us at: support@residentiagroup.com.au

REPLACING LAMPS

Your Outdoor Beverage Chiller uses a long-life, energy-saving LED light tube. Should you need to replace this light, please call the centre on 1300 11 4357 for a suitable replacement part.

To change the light tube

- 1 Unplug the power plug and ensure the light switch is off.
- 2 Remove the screws on both end of the light.
- 3 Take off the lamp, pull out the wires slightly.
- 4 Gently pull out the connector at the end of the light tube.
- 5 Insert the connector into the new lamp, and fasten it.

USING THE DOOR LOCK

The Outdoor Beverage Chiller is equipped with a door lock (Fig. 5, A) and a key (+ 1 spare) to keep your drinks safe. Please place the keys in a safe location.

To operate the lock:

- 1 Insert the key to the lock when the door is closed.
- 2 Turn the key to lock/unlock the door.

Fig. 5



This page
is intentionally
left blank

FAQs and Troubleshooting

Problem	Possible Cause	Possible Solution
The beverage chiller does not operate	<ul style="list-style-type: none"> • The appliance is not plugged in. • The appliance is turned off. • The circuit breaker tripped or a blown fuse. 	<ul style="list-style-type: none"> • Plug in appliance. • Turn on power point. • Reset circuit breaker/replace fuse.
The beverage chiller is not cold enough	<ul style="list-style-type: none"> • Check the temperature control setting. • The door is opened too often, or is kept open for too long. • The beverage chiller has recently been disconnected for a period of time. The door is not closed completely. 	<ul style="list-style-type: none"> • Reduce the temperature. • Do not open door for 4 hours. • Check that the door is closed properly and for any obstructions preventing the door closing properly.
The beverage chiller turns on and off frequently	<ul style="list-style-type: none"> • The room temperature is hotter than normal. • A large amount of contents has been added to the beverage chiller. • The door is opened too often. • The door is not closed completely. • The temperature control is not set correctly. • The door gasket does not seal properly. 	<ul style="list-style-type: none"> • Increase air flow into room. • Do not open door for 4 hours to allow beverage chiller to cool to temperature. • Check that the door is closed properly and for any obstructions preventing the door closing properly. • Check temperature setting and decrease if required. • Replace gasket.
Vibrations	<ul style="list-style-type: none"> • Beverage chiller is not level. • Beverage chiller is touching the wall. • If continued vibration occurs. 	<ul style="list-style-type: none"> • Level beverage chiller. • Ensure a 5cm gap from sides and top • Turn off the beverage chiller, unplug the power plug and contact our after sales support centre for further assistance.
The door will not close properly	<ul style="list-style-type: none"> • The beverage chiller is not level. • The gasket is dirty. • The shelves are out of position. 	<ul style="list-style-type: none"> • Level beverage chiller. • Clean gasket with warm water and a soft cloth. • Re-position shelves correctly.
Moisture forms on the inside walls	<ul style="list-style-type: none"> • The door is slightly open. • The door is kept open too long, or is opened too frequently. • The door does not seal properly. 	<ul style="list-style-type: none"> • Check that the door is closed properly and for any obstructions preventing the door closing properly. • Do not open door for 4 hours to allow beverage chiller to cool to temperature. • Check if gasket is damage and replace if it is.
Moisture forms on the outside of the appliance	<ul style="list-style-type: none"> • The door is slightly open, causing cold air from inside the beverage chiller to meet warm, moist air from outside. 	<ul style="list-style-type: none"> • Check that the door is closed properly and for any obstructions preventing the door closing properly.

Specifications

Model:	HBROBF118B
Storage Volume:	118L
Product Dimensions (W, D, H):	560mm, 500mm, 850mm* *Handle: +40mm Depth
Weight (Net/Gross):	38.5kg/41.5kg
Temperature Range:	0–10° C
Voltage:	220–240V/50Hz
Refrigerant:	R600a/55g
Climate Class:	T
Protection Class:	I
Other Features:	Internal LED light
	Electronic controls
	Double glazed glass door
	Single layer of heated glass**
	Adjustable feet

**** Note:** Your Harbour Outdoor Beverage Chiller is designed to eliminate any condensation from accumulating on the glass door. This is achieved by heating the outer glass surface of the door slightly. As such, it is normal for the door to feel slightly warm for the touch.

Specification and Technical Parameters


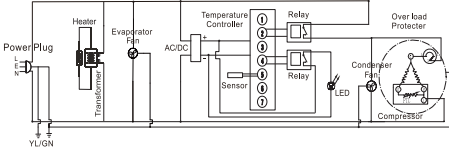 






This product complies with AS/NZS 60335.1 and AS/NZS 60335.2.24 electrical safety, and with EN 55014-1:2006+A1:2009 A2:2011 for electromagnetic compatibility.

Responsible Disposal

- At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately.
- This refrigeration appliance contains flammable refrigerants and insulation blowing gases, which must be removed before disposal. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling and recovery of the refrigerant. Contact your local authorities for advice on recycling facilities in your area.
- **Danger:** Risk of child entrapment! To avoid the possibility of child entrapment, take off the door and leave the shelves in place before discarding your beverage chiller so that children cannot easily climb inside.

SPECIFICATIONS CONT.

RATING PLATE

		OUTDOOR BEVERAGE CHILLER 118 LITRE CAPACITY																											
		<table border="0"> <tr> <td>Model</td> <td>HBROBF118B</td> </tr> <tr> <td>Climate Class</td> <td>T</td> </tr> <tr> <td>Storage Volume</td> <td>118L</td> </tr> <tr> <td>Protection Class</td> <td>I</td> </tr> <tr> <td>Voltage</td> <td>220-240V/50Hz</td> </tr> <tr> <td>Input Current</td> <td>1.2A</td> </tr> <tr> <td>Lamp Power</td> <td><10W</td> </tr> <tr> <td>IP Rate</td> <td>IP24 (door closed)</td> </tr> <tr> <td>Refrigerant</td> <td>R600a/55g</td> </tr> <tr> <td>Dimensions (HxWxD)</td> <td>850x560x500mm</td> </tr> <tr> <td>Foaming Agent</td> <td>Cyclopentane</td> </tr> <tr> <td>Made in PRC</td> <td></td> </tr> <tr> <td>Serial No.</td> <td></td> </tr> </table>		Model	HBROBF118B	Climate Class	T	Storage Volume	118L	Protection Class	I	Voltage	220-240V/50Hz	Input Current	1.2A	Lamp Power	<10W	IP Rate	IP24 (door closed)	Refrigerant	R600a/55g	Dimensions (HxWxD)	850x560x500mm	Foaming Agent	Cyclopentane	Made in PRC		Serial No.	
Model	HBROBF118B																												
Climate Class	T																												
Storage Volume	118L																												
Protection Class	I																												
Voltage	220-240V/50Hz																												
Input Current	1.2A																												
Lamp Power	<10W																												
IP Rate	IP24 (door closed)																												
Refrigerant	R600a/55g																												
Dimensions (HxWxD)	850x560x500mm																												
Foaming Agent	Cyclopentane																												
Made in PRC																													
Serial No.																													
   																													
Residentia Group Pty Ltd T. 1300 11 4357 E. support@residentiagroup.com.au		V1.2 12/2021 PLU: 18103																											
		EAN: 4088700221518 Product Code: 707825 Made in China																											
		 																											



H A R B O U R

Outdoor Beverage Chiller 118L Capacity

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 11 43 57 or write to us at:

165 Barkly Avenue,
Burnley VIC 3121
Australia

Email: support@residentialgroup.com.au

Helpline hours of operation:
Mon–Fri
9:00 AM - 5:00 PM





Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on 1300 11 4357.

For an electronic copy of this manual, go to www.harbour-appliances.com.au and download a copy.

H A R B O U R



E2447

AN INITIATIVE BY RESIDENTIA GROUP

TEL: 1300 11 4357 | EMAIL: SUPPORT@RESIDENTIAGROUP.COM.AU